



Caliper bracket/strut body orientation




Grasp bracket so edge of pliers are flush with outer edge of rotor slot




After bend, fit slot over rotor and bend 90-degrees




Example of bracket after 90-degree bend

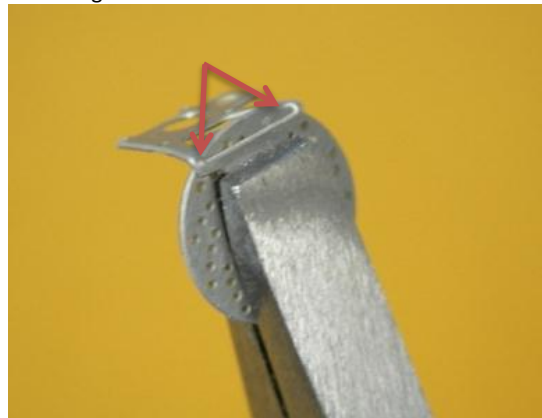


Fit slot over rotor. Clamp against rotor face. Rotor must be against outer edges. See arrows.

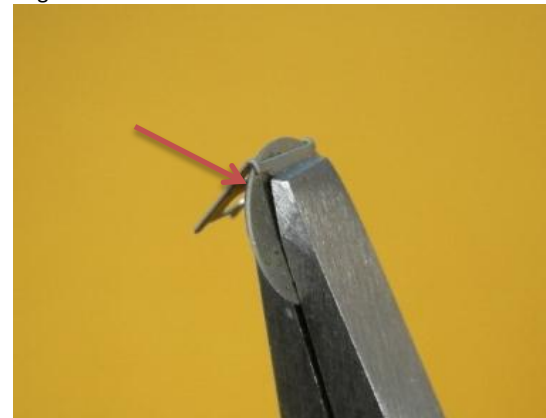


Be careful not distort bracket by bending over Nose of pliers. See arrow

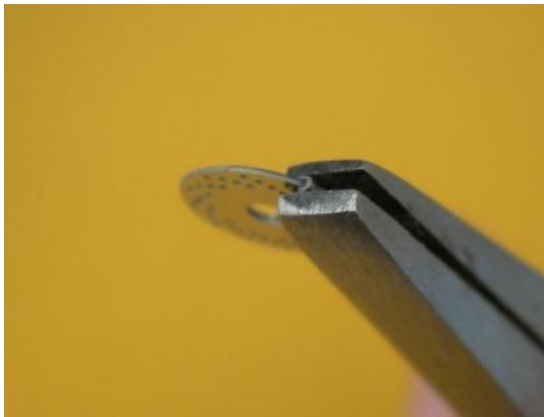

Fold bracket over rotor 180-degrees and crimp

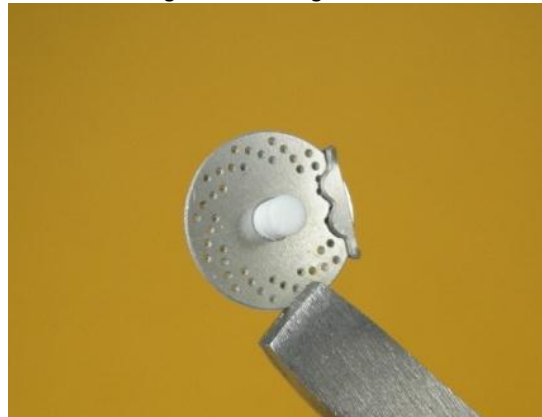

Bracket fitted to rotor before installation on strut body

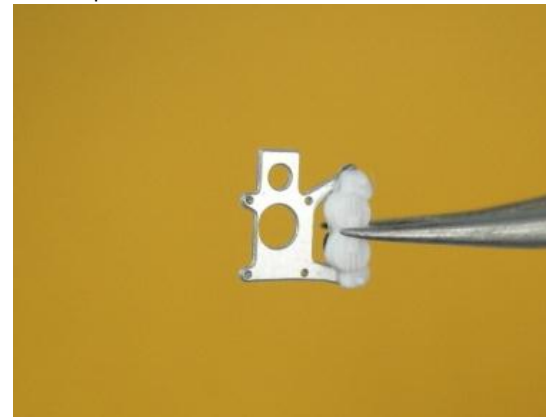

Proper orientation of calipers when mounted to bracket

VERY IMPORTANT. Remember your caliper brackets must be folded as mirror images of each other. Be sure vent holes match side to side!

Strut Assembly

